

# Whirlpool WWDC 6400 Washing Machine

Need a manual for your Whirlpool WWDC 6400 Washing Machine? Below you can view and download the PDF manual for free. There are also frequently asked questions, a product rating and feedback from users to enable you to optimally use your product. If this is not the manual you want, please [contact us](#).

Is your product defective and the manual offers no solution? Go to a [Repair Café](#) for free repair services.

## Manual

### APM For All

See how to improve cross-team communication to keep users happy.

SolarWinds

OPEN



1/13

# DEFINITION OF USE

This washing machine is exclusively destined to wash and spin machine washable laundry in quantities which are usual for private households.

- Observe the instructions given in these Instructions for Use and the Programme Chart when using the washing machine.

- Keep  
Pro  
ma  
Inst

## BEFORE USING THE WASHING

### 1. Removing the packaging and inspection

- After unpacking, make sure that the washing machine is undamaged. If in doubt, do not use the washing machine. Contact After-Sales Service or your local retailer.
- Check that the accessories and supplied parts are all present.
- Keep the packaging materials (plastic bags, polystyrene parts, etc.) out of reach of children, as they are potentially dangerous.
- If the appliance was exposed to the cold prior to delivery, keep it at room temperature for a few hours before operating.

- Wa  
(flo  
• Use  
ma  
not  
• For  
ten

### 2. Remove the transport bolts

- The washing machine is fitted with transport bolts to avoid any possible damage to the interior during transport. Before using the machine, it is imperative that the transport bolts are removed.
- After their removal, cover the openings with the 4 enclosed plastic caps.

- 5. Dr  
• Fir  
anc  
• If tl  
inte  
equ  
load

### 3. Install the washing machine

- Remove the protective film from the control panel (if available on your model).
- Move the appliance without lifting it by the worktop.

- 6. Ele  
• Ele  
qua  
ma  
safe  
• Dat  
proc  
the  
• The  
me

# PRECAUTIONS AND RECOMMENDATIONS

## I. Safety instructions

- The washing machine is appropriate for indoor use only.
- Do not store flammable fluids near the appliance.
- Children must not be allowed to play with the washing machine or to climb into the drum.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Do not operate the washing machine at temperatures below 5°C.
- If you want to place a dryer on top of your washing machine, first contact our After-Sales Service or your specialist dealer to verify if this is possible. This is only admitted if the dryer is fixed on the washing machine by using an appropriate stacking kit available through our After-Sales Service or your specialist dealer.
- Do not leave the appliance plugged in when not in use.
- Turn off the tap when not in use.
- Before any cleaning and maintenance switch off the machine or disconnect it from the mains.
- Never open the door forcibly or use it as a step.
- If necessary, the power cable may be replaced with an identical one obtained from our After-Sales Service. The power cable must only be replaced by a qualified technician.
- The Manufacturer is not liable for any damage to laundry resulting from inadequate or incorrect fabric care instructions which have been provided

The  
doc  
tha  
hou  
to 1  
of €  
Dis  
loc  
For  
rec  
cor  
wa  
pur

## 4. Frost


Do no  
to fro  
machin  
• Re  
wa  
• Re  
anc  
• Em  
foll  
Res  
per

## 5. Sa

The w  
optimi  
cannot  
the ma  
• Ach  
anc  
load  
• Do

# DESCRIPTION OF THE WASHIN

Depending on the mode

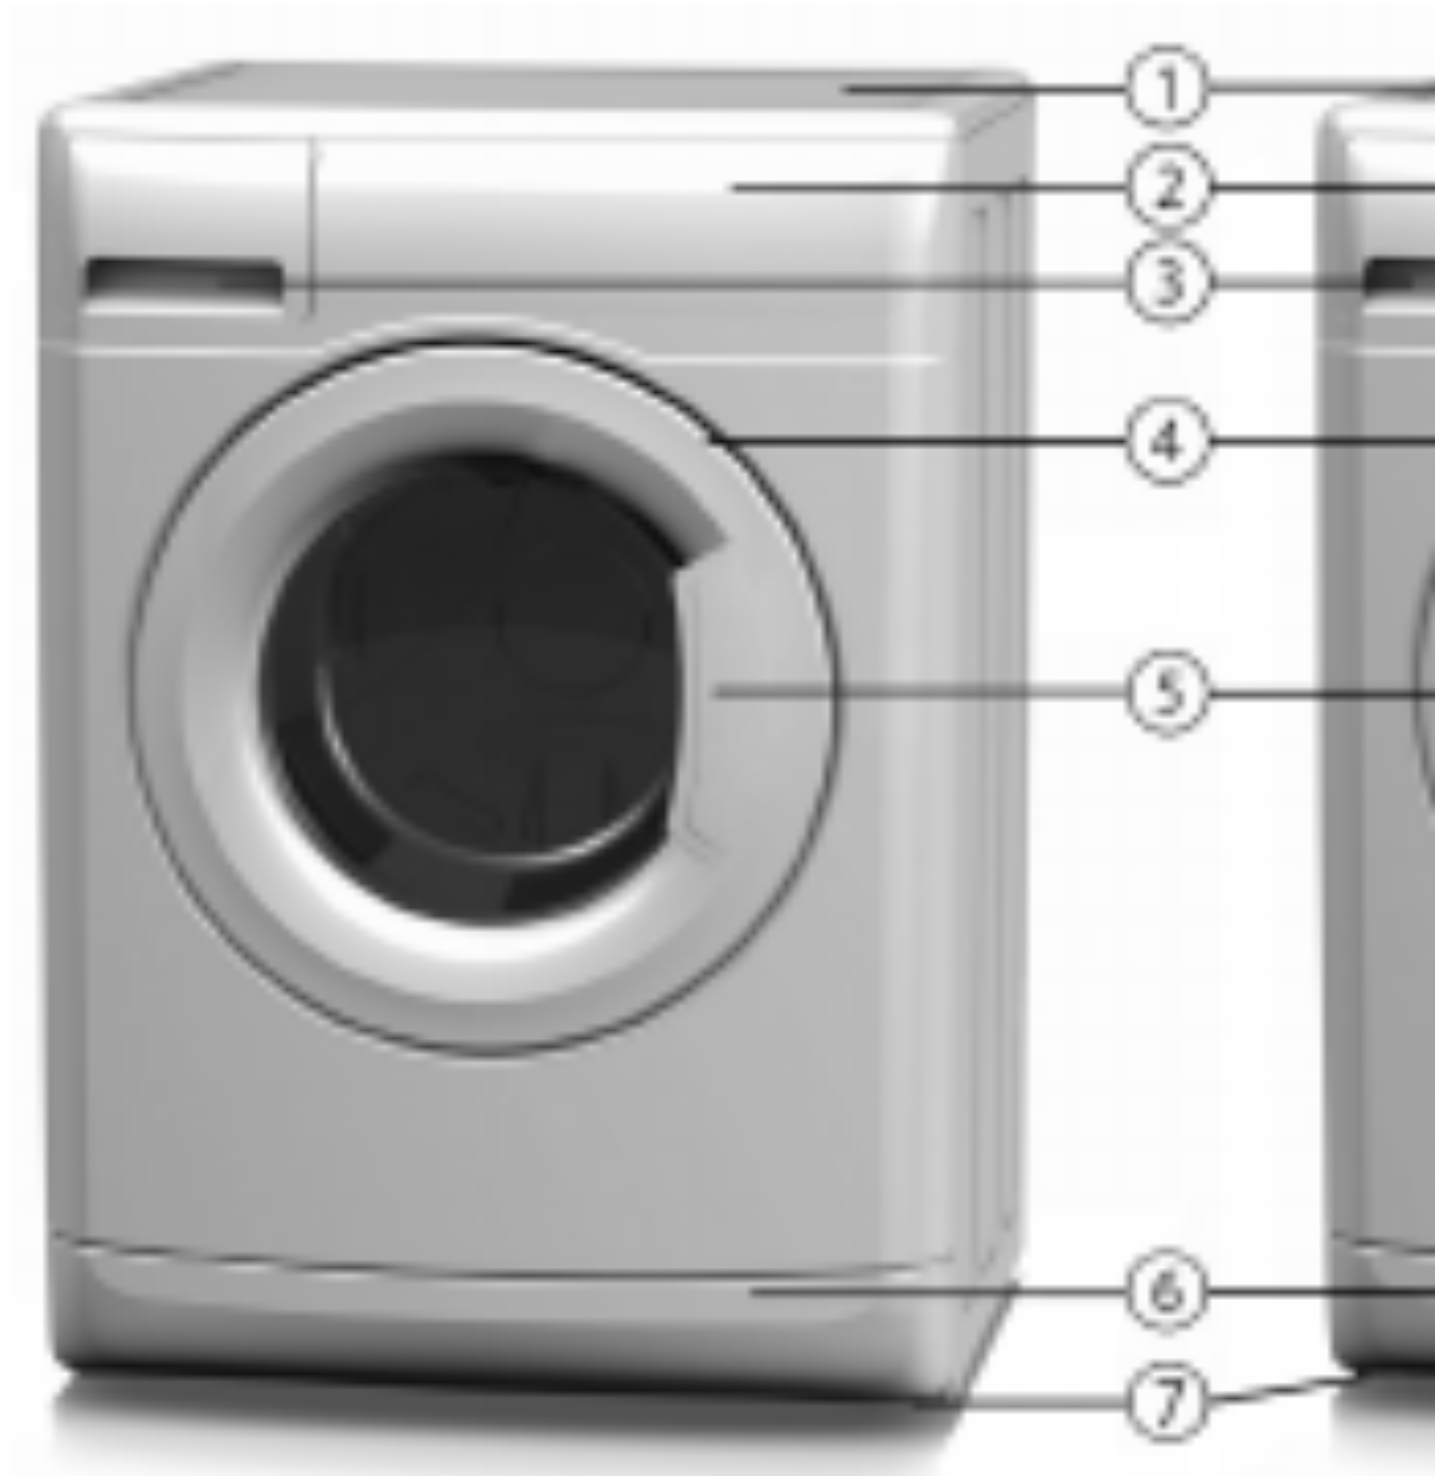

1. Worktop
2. Control panel
3. Detergent dispenser
4. Service plate (inside the door)
5. Door
6. Pump access with filter and emergency drain hose (if available)
7. Adjustable feet

# PREPARATION OF THE WASHING

## 1. Sort the laundry according to...

- **Type of fabric / care label symbol**  
Cottons, mixed fibres, easy care/synthetics, wool, handwash items.
- **Colour**  
Separate coloured and white items. Wash new coloured articles separately.
- **Size**  
Wash items of different sizes in the same load to improve washing efficiency and distribution in the drum.
- **Delicates**  
Wash small items (e.g. nylon stockings, belts etc.) and items with hooks (e.g. bras) in a cloth bag or pillow case with zip. Always remove curtain rings or wash curtains with the rings inside a cotton bag.

## 2. Empty all pockets

Coins, safety pins etc. can damage your laundry as well as the appliance drum and tub.

## 3. Fasteners

Close zips and fasten buttons or hooks; loose belts or ribbons should be tied together.

## Stain

- Blot the stain
- To stain checker
- Pre-treat if necessary

## Dyeing

- On washable fabrics
- Follow instructions
- Place in a plastic bag

## Load

1. Open the door
2. Load the drum
3. Close the door

# DETERGENTS AND ADDITIVES

**Keep detergents and additives in a safe, dry place out of the reach of children!**

**The choice of detergent depends on:**

- Type of fabric (cottons, easy care/synthetics, delicate items, wool).
- Colour

## Dose

- Follow the detergent instructions
- detergent
  - size of load
  - fabric

## Where to put detergent and additives

The detergent drawer has three chambers (picture “A”).

### Prewash Chamber

- Detergent for the prewash

### Main Wash Chamber

- Detergent for the main wash
- Stain remover
- Water softener

### Softener Chamber

- Fabric softener
- Liquid starch

Pour additives only up to the “**MAX**” mark.

If you use liquid detergent, close the dispenser **right after having filled in the detergent.**

### Using chlorine bleach

- Wash your laundry in the desired programme (Cotton, Synth) adding an appropriate amount of chlorine bleach to the SOFT chamber (close the detergent dispenser carefully).
- Immediately after end of programme, start the “Rinse and Spin” programme to eliminate any residual bleach smell; if you want you can add softener.  
Never put both chlorine bleach and softener into the softener chamber at the same time.
- Prefer to use bleaches on oxygen basis; in this case follow the instructions of the manufacturer.

### Using starch

- Select the “Rinse and Spin” programme and check that the spin speed is adjusted to not more than 800 rpm.
- Start the programme, pull out the detergent dispenser so that you can see approximately 3 cm of the softener chamber.
- Pour the starch solution prepared into the softener chamber



















advertisement

## Rating

Let us know what you think about the Whirlpool WWDC 6400 Washing Machine by leaving a product rating. Want to share your experiences with this product or ask a question? Please leave a comment at the bottom of the page.

**Are you satisfied with this Whirlpool product?**

 [Yes](#)  [No](#)

Be the first to rate this product

0 votes

## Frequently Asked Questions

Our support team searches for useful product information and answers to frequently asked questions. If you find an inaccuracy in our frequently asked questions, please let us know by using our contact form.

**My washing machine won't drain, what can I do?**  Verified

The main reason a washing machine won't drain is because of blockage in either the pump or the drain hose. If your washing machine has access to these parts, try to remove any blockage. If this does not solve the problem or if you don't have access to these parts you should contact a mechanic or the manufacturer.

[This was helpful](#) (12398)

 [share](#)

**My washing machine won't start when I press the start-button, what can I do?**  Verified

In many cases the door of the washing machine hasn't closed properly. Open and close the door and try again.

[This was helpful](#) (9433)

 [share](#)

**There is no water coming into my washing machine, what can I do?**  Verified

Check if the water inlet is open and if there aren't any kinks in the hose of the water inlet. If this doesn't solve the problem you should contact the manufacturer.

[This was helpful](#) (4012)

 [share](#)

**My washing machine makes a lot of noise and/or vibrates loudly, what can I do about that?**  Verified

It's possible that the washing machine has not been leveled. You can do this by adjusting the feet to make it perfectly level. The problem can also be caused by inserting too much clothes in the machine. If these are not the cause of your problem you should contact the manufacturer.


[This was helpful](#) (2836)

 [share](#)

**Can I connect my washing machine to a warm water outlet?**  Verified

Although washing machines can probably handle water intake up to 65°C, this is not recommended by most manufacturers. There are wash cycles that specifically make use of cold water. In those cases warm water can harm the results of your wash cycle. Also, many washing machines are designed to be connected to a cold water outlet.

[This was helpful](#) (1888)

 [share](#)

**The door of my washing machine won't open, what can I do?**  Verified

There can be several causes. The most common cause is the filter being clogged. Unplug the appliance and check the filter.

Remove any blockage if necessary. The location of the filter is different depending on the model. It is also possible that there is a special lever to open the door. If these options don't help, the last option is to unplug the appliance for a period of 30-60 minutes and try to open the door after that. If this doesn't work, contact the manufacturer or a mechanic.

[This was helpful](#) (1507)

[share](#)

### **In which compartment should the detergent go?** Verified

Most washing machines have 3 compartments for detergent. These compartments are often marked with I, II and \* to show where the detergent goes. Compartment I is used for a pre-wash cycle, II is for the main wash cycle and \* is for fabric softener. Compartment II is used most often.

[This was helpful](#) (793)

[share](#)

### **My washing machine smells, what can I do about it?** Verified

There are washing machines with self-cleaning features. If these features are not available it's possible to add 100ml of white vinegar or 100gr of soda crystals and have the washing machine run a 90 °C program.

[This was helpful](#) (551)

[share](#)

### **What should I pay attention to when moving a washing machine?** Verified

When moving a washing machine, you should secure the drum. You can use the transit bolt which comes with every washing machine and will prevent the drum from moving around inside the machine. You also need to drain all the water.

[This was helpful](#) (304)

[share](#)

### **Can I stack my dryer and washing machine?** Verified

In general it is possible to directly stack a dryer and washing machine directly on top of each other. This only works with front loading models. However, it is advisable to use a fitting accessory to do so. This will prevent the machines from vibrating and falling off and also prevents damage to the bottom machine.

[This was helpful](#) (279)

[share](#)

### **Can I connect a washing machine to an extension cord?** Verified

Appliances that require large amounts of power, like a washing machine, can not be connected to all extension cords. See what the power usage of the washing machine is, which is indicated in Watt, and check if the extension cord can handle this. There are extension cords with thicker cables that are made to handle larger appliances.

[This was helpful](#) (211)

[share](#)

### **What does '6th Sense' mean?** Verified

Whirlpool appliances that are equipped with 6th Sense technology have sensors that ensure optimal operation of the machine. For example in dryers, these sensors measure the moisture left in the wash and stop the machine when everything is completely dry.

[This was helpful](#) (106)

[share](#)

## Join the conversation about this product

**Name\***

John Doe

**Message\***

Here you can share what you think about this product. If you have a question, first carefully read the manual. Requesting a manual can be done by using our contact form.



Receive notifications

Submit

This manual was originally published by Whirlpool.

## About us

For all your manuals, instructions and user guides.

## Official partner of

Repair Café

## Manuall

[About us](#)

[Contact](#)

Privacy Policy © 2020 manuell.co.uk KvK nr. 77685601

